TOTAL

FAGE

Going to the Potty



Your TALKING BABY ALIVE® doll comes to you wearing her dress and training pants. When she tells you she has to go to the polity, remove her training pants and set her on the potty. (Make sure post is inserted into the opening in the small of her back). When she tells you she is finished, remove her from the potty and lay your baby doll on a lowel.

Gently wash her and the potty with a daring cloth using mild soap and water. Dry her well and put on her training pants. When you are done playing with her, be sure to clean her according to instructions on page one.

## Problems?

First, if you have any problems with your doll speaking or making unusual sounds... press her lower lip to reset her.

Then, if doll stops talking . . . check 9 volt battery.

If your doll stops chewing . . . check "C" size batteries.

Replace batteries if needed.



#### Dear Parent:

TALKING BABY ALIVE® doll is very special. She actually talks, eats, drinks and goes potty just like a real toddler.

#### IMPORTANT

Feed TALKING BABY ALIVE® doll water or her special food only (available in BABY ALIVE® Baby Food & Dieper Set and Baby Food Refills). However, If other food is fed to the doll, or when your child is finished playing with the doll, clean her immediately.

#### CLEANING

To clean the doll, undress her and set her on the potty. Feed her a training cup or more of water until the water comes out clear. (Potty will hold about one training cup of water and should be checked during the cleaning process). Wipe the doll's face and body with a damp cloth when you are through.

TALKING BABY ALIVE® doll should never be immersed in water. Her hair must not be washed.

## **Batteries**


7

TAL

D (H

530

The battery compartment is located in doll's back. Insert a quarter and push down on it to pry open the compartment door; remove cover. Insert batteries (uses one nine volt and two "C" size alkaline batteries, not included) as shown. To close, fit top of cover into place and snap bottom of cover closed.

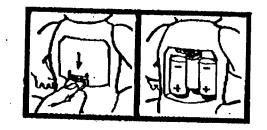

# Preparing Her Food



Pour "food" packet contents Into the dish.

 


Add 1 tablespoon (1/2 oz.) of water to the "food". The line on the inside of the training cup marks the correct amount of water.



Stir the "food" with a spoon until emooth.

Note: The doll should be fed only her BABY ALIVE® food.







Position doll as shown for eating or drinking. She begins eating or drinking when you press her spoon or training cup against her lower lip for a lew seconds. Give her a drink from her training cup after each second or third spoonful of food. She will speak in between feedings.

# Mouth Movement and Talking

Your doll will suck her thumb, chew or drink if you press her lower lip with a spoon, cup, or her thumb for a lew seconds. (Mouth movement lasts about 5 seconds.) She pauses and then talks. She will say different things depending upon whether or not you feed her. When left unattended she will turn off after about 3 minutes. Pressing on her lower lip will start her again.



## **Phrases**

"I'm still hungry, Mommy" "Yum, that's good"

"Aron't i a big girl?" "All done now"\* "I have to go polly"\*

"I love you Mommy" "Lét's play"

\* Repeats phrase for about 3 minutes then automatically turns off if left unattended.