 
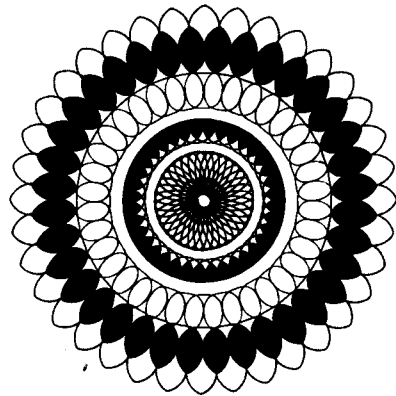 
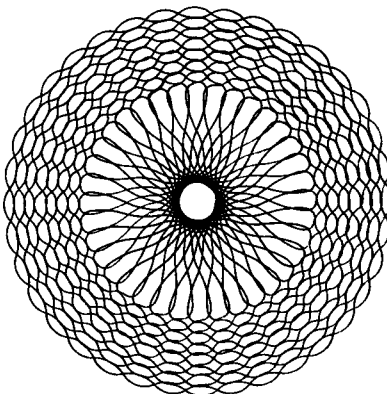 
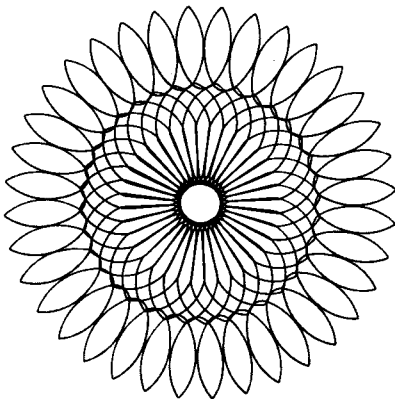 


SPIROTOT™

FROM THE MAKERS OF SPIROGRAPH® PLUS™

DESIGN TOY

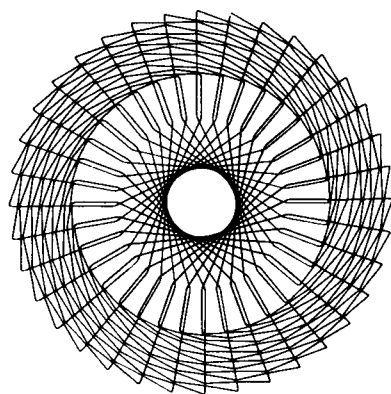

Kenner

 
 
 
©Kenner 1988, a division of Tonka Corporation

343009030

WE REALLY DO CARE!

We make each toy with tender loving care. If there is a problem with your toy as you receive it, please let us know. Simply describe the problem and mail that description along with your name and address to:

KENNER PRODUCTS
Consumer Affairs Dept.
1014 Vine St.
Cincinnati, OH 45202

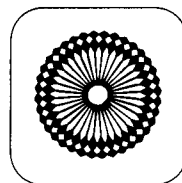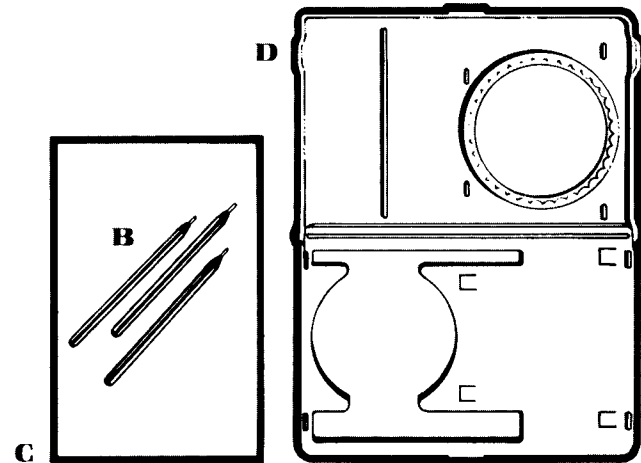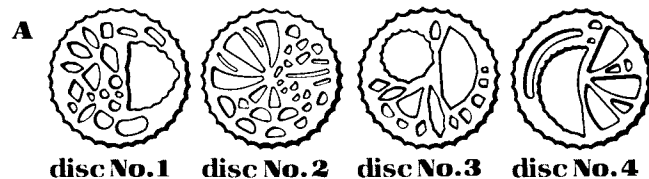


A. Four design discs (1, 2, 3, 4). B. Three ball point pens. C. One paper pad.

D. SPIROTOT® frame.


• The design discs are engineered to automatically rotate the pattern as you draw around with a pen.

 LET'S DRAW A DESIGN

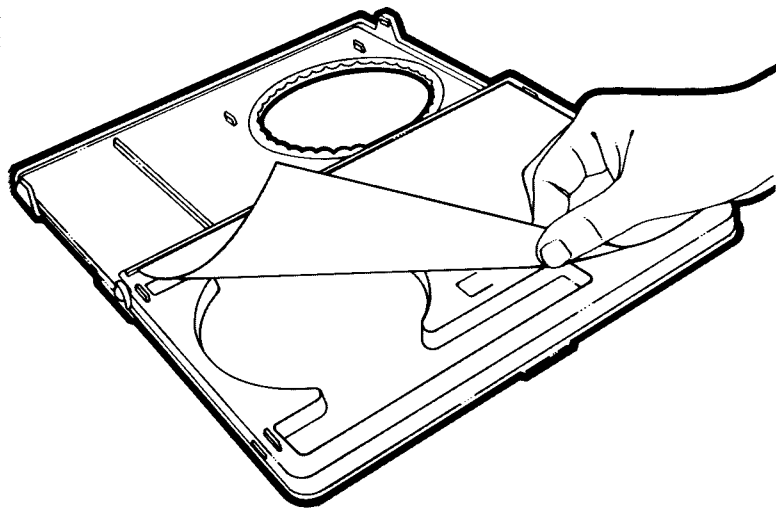


1

● Open the frame and place a piece of paper on the frame. (For take-along fun, case holds up to 12 pages of SPIROTOT® paper. Additional paper also included.)

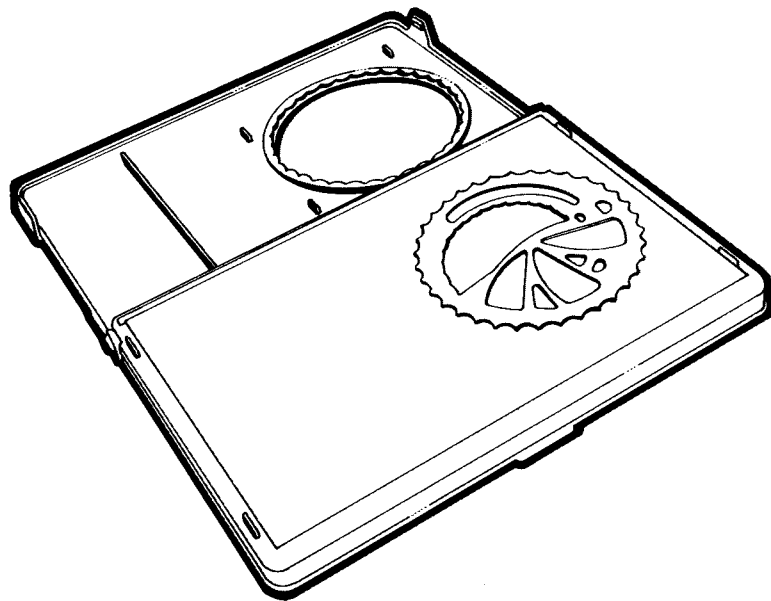


2

● Choose a design disc and place it on the paper so it appears through the circular window when the frame is closed.

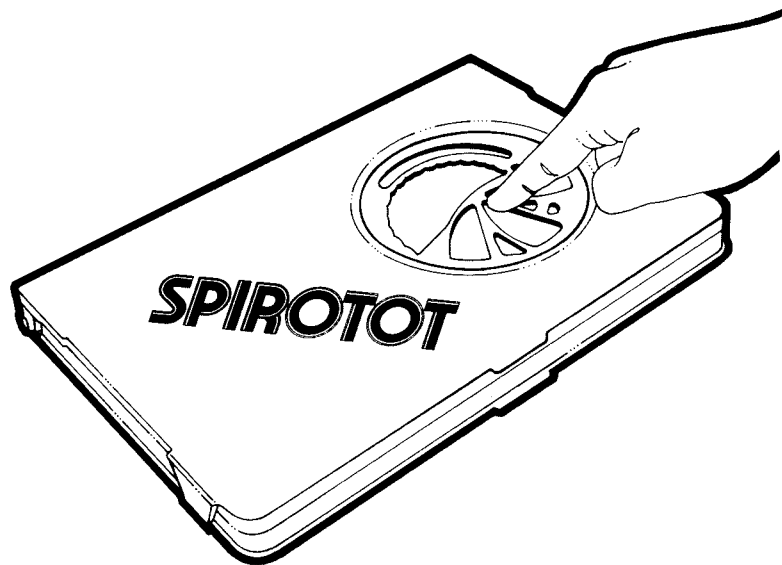


3

- Adjust the disc so it is free to move in the circular window.

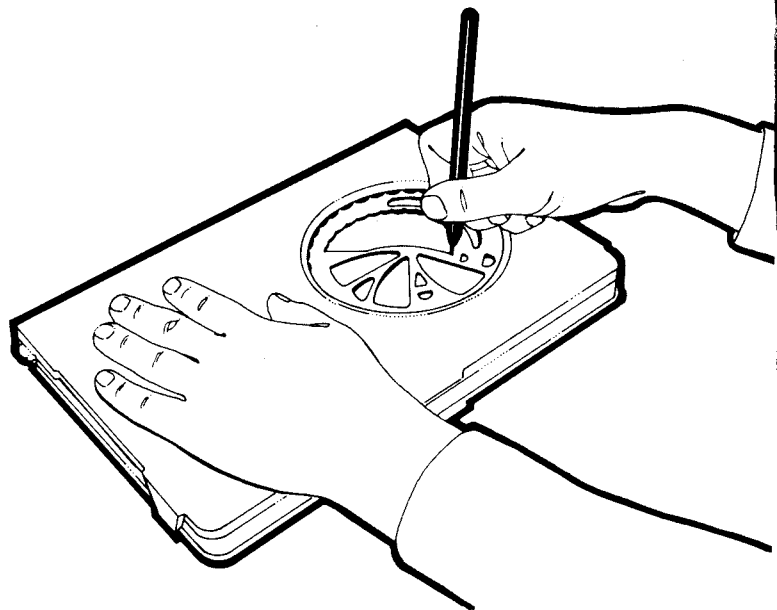


4

- Place a pen at the edge of the pattern you wish to make and start to draw.
- Hold the pen vertically to the edge of the pattern as you follow the outline of the pattern with the pen.

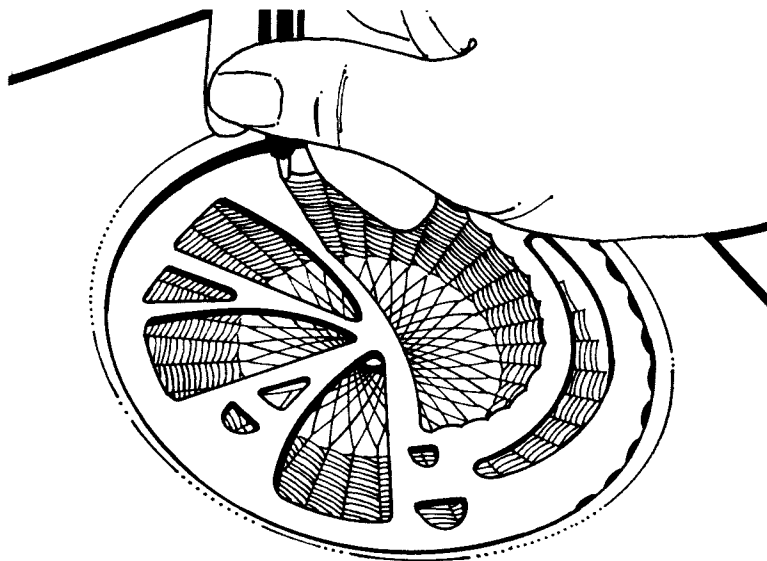

5


- Continue to draw until the line meets where you started.
- To complete the design, draw the pattern thirty-six times.

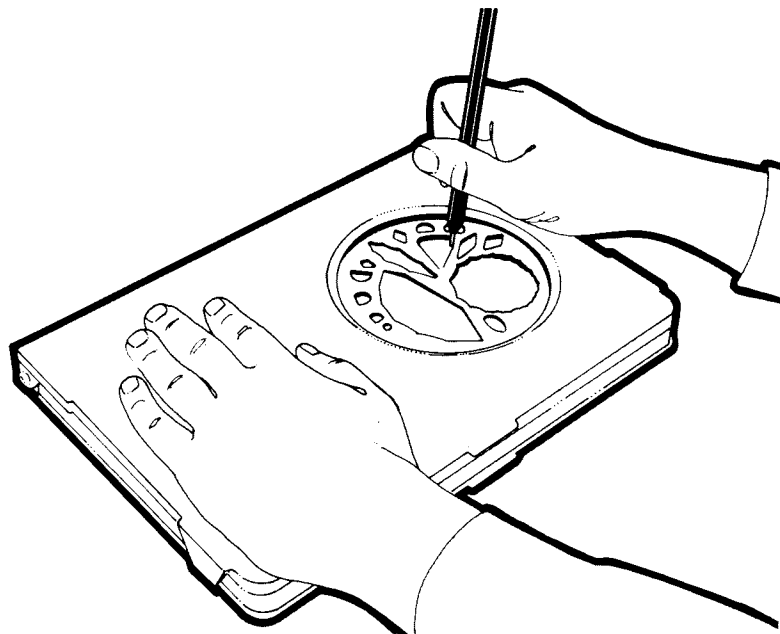


6

- To make a more complex design, choose another design in the disc and draw again.
- You may want to choose another color pen to make your design more colorful.



DESIGNS DRAWN WITH DESIGN DISCS

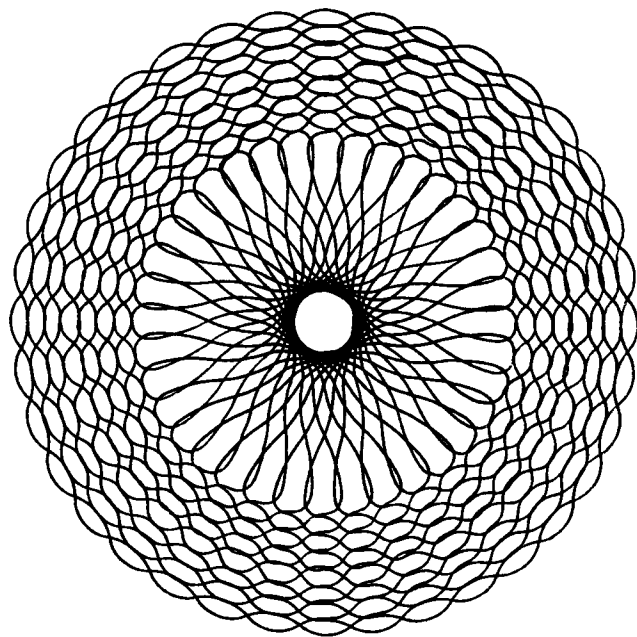


● Use design
disc No. 1.

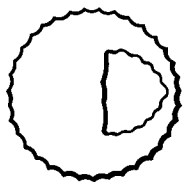

● To make
the above
design use
the patterns
indicated.

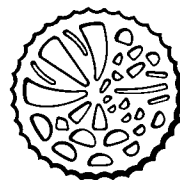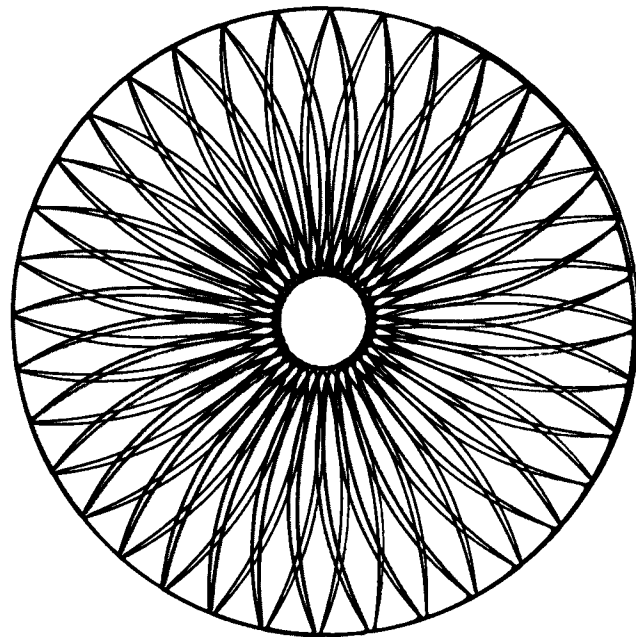


● Use design
disc No. 2.

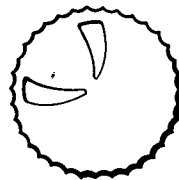


● To make
the above
design use
the patterns
indicated.



Hundreds of designs can be created with your SPIROTOT®. Here are just a few samples.

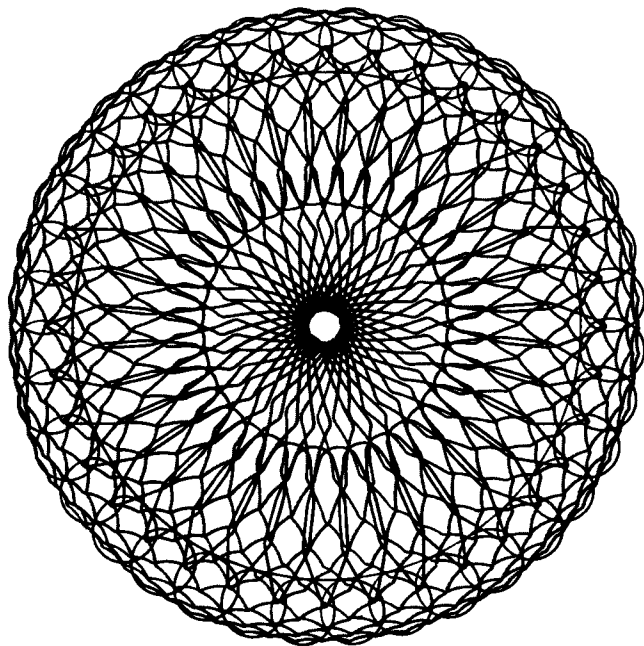


● Use design
disc No. 3.

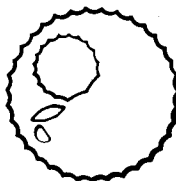

 
 
● To make
the above
design use
the patterns
indicated.

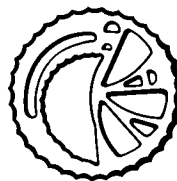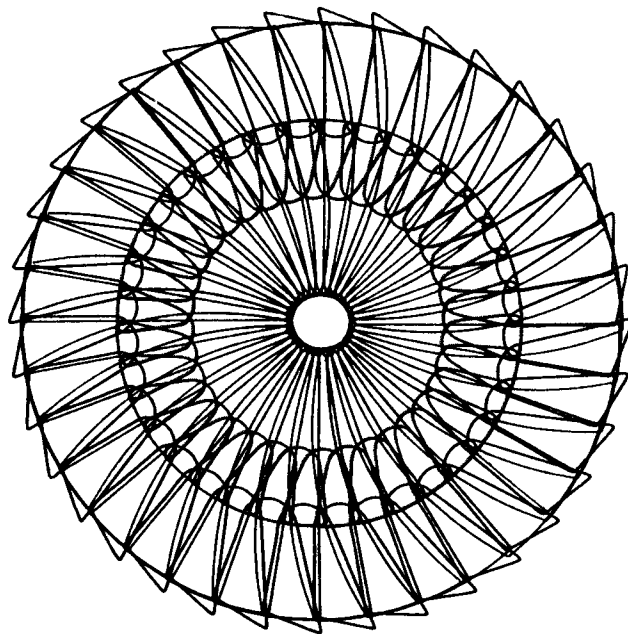




● Use design
disc No. 4.

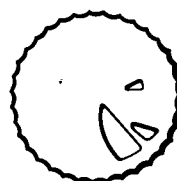 

 
 
● To make
the above
design use
the patterns
indicated.

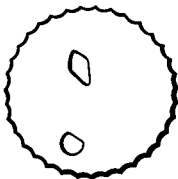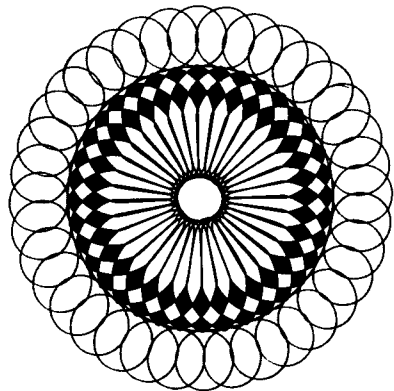

  
 
- Use design disc No. 1.
- To make the design at left use the patterns indicated.

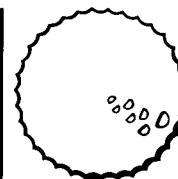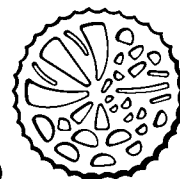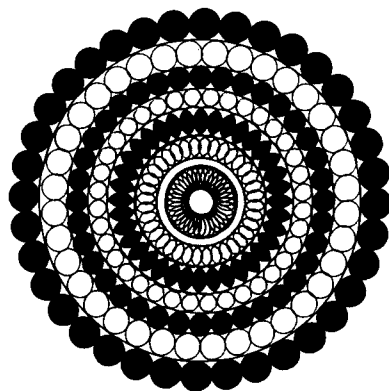

  - Use design disc No. 2.
- To make the design at left use the patterns indicated.

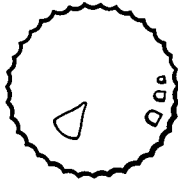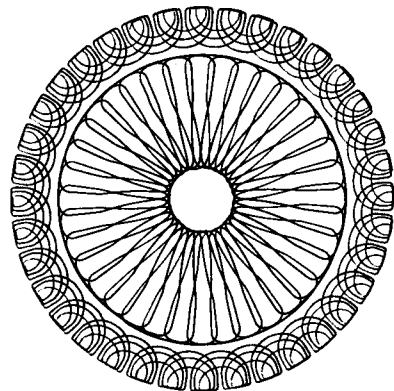

  - Use design disc No. 3.
- To make the design at left use the patterns indicated.

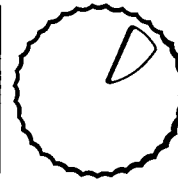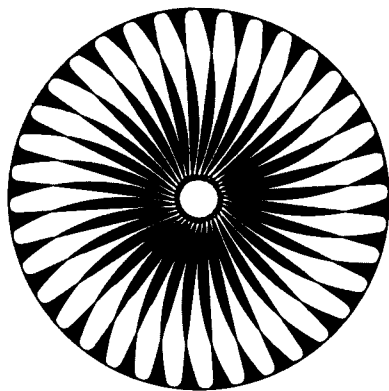

- Use design disc No. 4.
- To make the design at left use the patterns indicated.