


8. Figures fit into vehicle as shown.





## CAPTURE CRUISER™

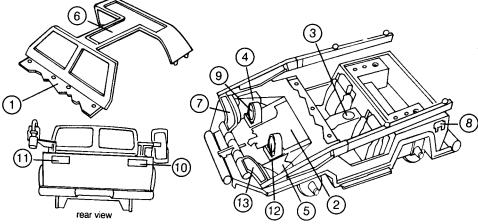


## LABEL APPLICATION

1. Apply labels to unassembled vehicle, using numbers on label sheet and these illustrations.

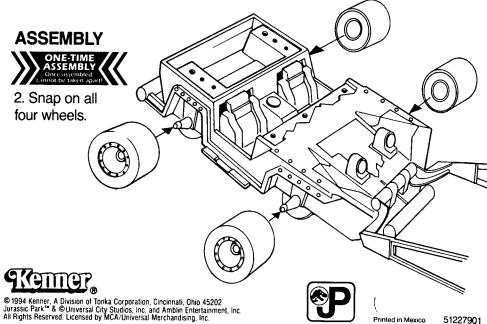

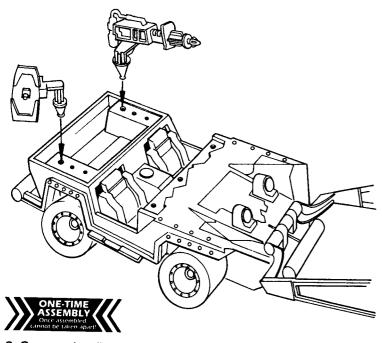

3. Snap radar dish into largest hole behind passenger seat. Snap blaster into largest hole behind driver's seat.

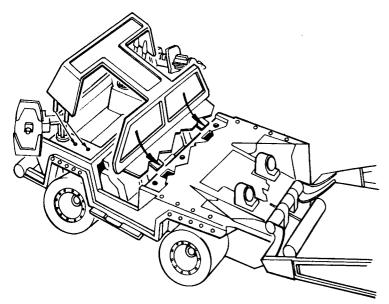



## Windshield/roll bar Assembly:

4. First insert tabs on <u>front</u> of windshield into slots in vehicle, then snap pegs at back of roll bar into holes as shown.

## **Net Assembly:**

5. Locate balls on top of arms. Lay small end of net over balls, carefully aligning the holes in net over the balls. Place loop ends over balls to secure net, as shown.

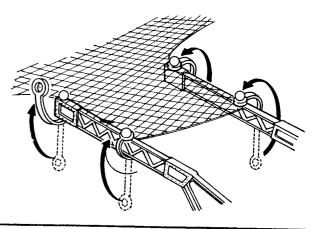

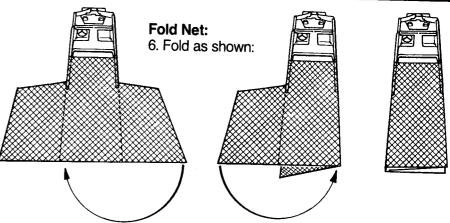

A) Fold the right flap under to the left. B) Fold the left flap under to the right.

